

B-130



ASSEMBLY INSTRUCTIONS

• REPLACEMENT PARTS

WEIDER HEALTH AND FITNESS 21100 ERWIN STREET, WOODLIN HILLS, CALIFORNIA, U.S.A. 91367

WARNING CONSULT YOUR PHYSICIAN

CONSULT YOUR PHYSICIAN BEFORE STARTING YOUR EXERCISE PROGRAM. IT IS ADVISABLE TO HAVE A PHYSICIAL EXAMINATION BY YOUR PHYSICIAN BEFORE YOU ENTER ANY EXERCISE PROGRAM.


FOR YOUR OWN SAFETY, DO NOT BEGIN ANY EXERCISE WITHOUT PROPER INSTRUCTION. CHILDREN AND HANDICAPPED PERSONS SHOULD NOT USE ANY EXERCISE EQUIPMENT WITHOUT A QUALIFIED PERSON IN ATTENDANCE.


TRAIN WITH A PARTNER

IT IS RECOMMENDED THAT AN INDIVIDUAL SHOULD NOT WORKOUT WITHOUT A TRAINING PARTNER IN ATTENDANCE. SET UP YOUR PROGRAM TO ACCOMMODATE TWO PEOPLE AND YOU WILL BE HIGHLY MOTIVATED.

B-130 PARTS LIST


DIAGRAM NO.	PART NAME	NO. REQUIRED	ORDERING NUMBER
1	UPRIGHT	1	CA06-0208
2	MAIN FRAME	1	CA06-0114
3	FRONT SUPPORT	1	CA06-0115
4	LEG CURL	1	CA06-0116
5	BACKREST	1	CA05-0314
6	SEAT	1	CA05-0315
7	PAD BAR	2	CA06-6053
8	FOAM PAD	4	CA01-0400
9	BACKREST ADJ. BAR	1	CA06-6054
10	LONG ANGLE IRON	2	CA05-6046
	HARDWARE BAG		CA06 - 5778
A	3/4 RD. PLASTIC CAP	4	AA -8004
В	1º RD, PLASTIC CAP	1	AA-8005
С	1 COVER CAP	. 1	AA-8070
D	2" SQ. PLASTIC CAP	2	AA - 8002
E	11/2 SQ. PLASTIC CAP	3	AA - 8001
F	3/8"- 16 - 21/2" HEX HEAD BOLT	1	HH - 5018
G	3/8" - 16 LOCK NUT	1	HH-5013
Н	5/16-20- 21/2" HEX HEAD BOLT	4	HH - 5015
J	5/16-20 LOCK NUT	4	HH-5021
К	1/4- 20 - 3/4" MACHINE SCREW	6	HH - 5022
L	LOCKING PIN	1	WW-7004
	UPRIGHT DECAL - RIGHT	1	DE - 4015
	UPRIGHT DECAL - LEFT	1	DE - 4016
	INSTRUCTION MANUAL	1	IN21188

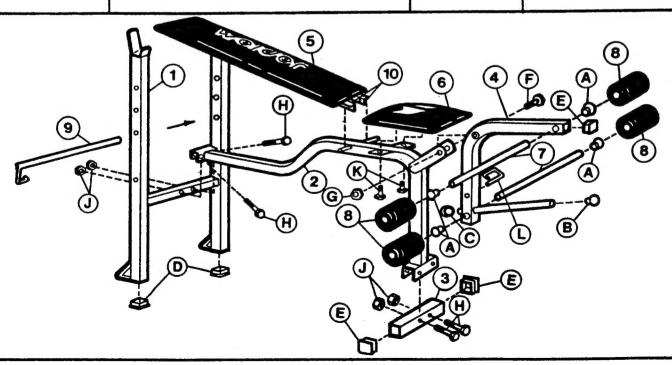

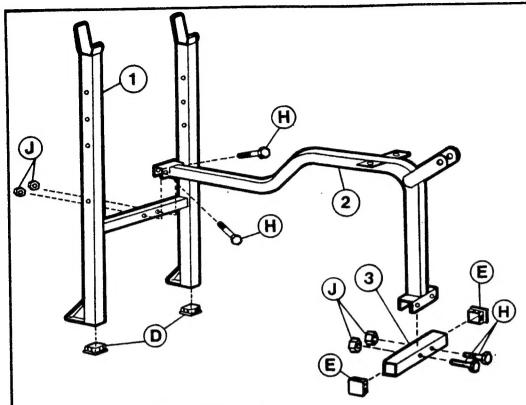

STEP 1 - FRAME ASSEMBLY


Begin by inserting 2 SQUARE PLASTIC CAPS (D) into UPRIGHT FRAME (1). Align bolt holes on main frame front u-bracket and FRONT SUPPORT (3). Secure with 2 HEX HEAD BOLTS (H) and 2 LOCK NUTS (J). With UPRIGHT FRAME (1) standing upright, lower rear u-brackets onto main frame crossmember. Align bolt holes and secure with 2 HEX HEAD BOLTS (H) and 2 LOCK NUTS (J). Insert 2 SQUARE PLASTIC CAPS (E) into FRONT SUPPORT (3). Tighten all bolts.

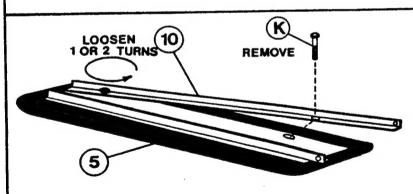

NOTE: The lower or attachment end of the BACKREST (5) can be identified quickly by the LONG ANGLE IRONS (10). The LONG ANGLE IRONS (10) will be extended approximately two inches beyond the BACKREST PAD (5).

STEP 2 - BACKREST PREPARATION

Turn BACKREST (5) over to expose work area. Both LONG ANGLE IRONS (10) have been fastened to BACKREST (5) for shipment. One long angle iron must be loosened in order to assemble BACKREST (5) to main frame pivot rod. The lower MACHINE SCREW (K) must be removed while the upper MACHINE SCREW (K) is only loosened. The LONG ANGLE IRON (10) can now swing freely from the lower end of BACKREST (5).

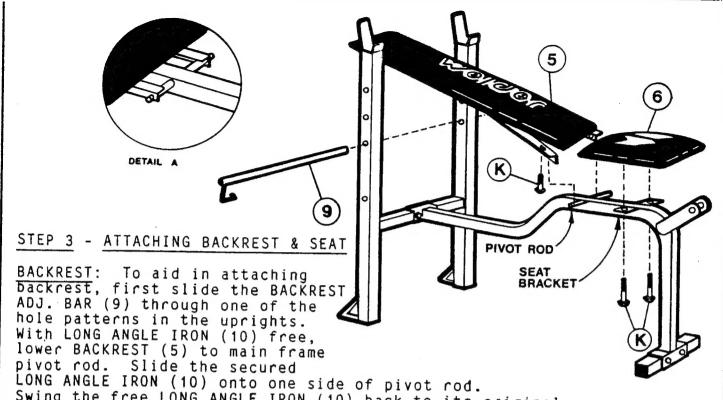

Swing the free LONG ANGLE IRON (10) back to its original position and onto the opposite end of the pivot rod. See Detail A. Replace MACHINE SCREW (K) that was removed in Step 2 and tighten all machine screws.

SEAT: With SEAT (6) right-side up, lower SEAT (6) to seat brackets on main frame. Align bolt holes and fasten with 2 MACHINE SCREWS (K) Tighten all machine screws.

